


Cap	Connector	Air Filter	O Ring
Polyamide plastic Black Matte	Polyacetal plastic Black Matte	Polyurethane plastic Filtration: 10 μ	Nitrile rubber (NBR)

Part Number	Weight (g)
BSC-3/8	18

Installation & Removal Instructions

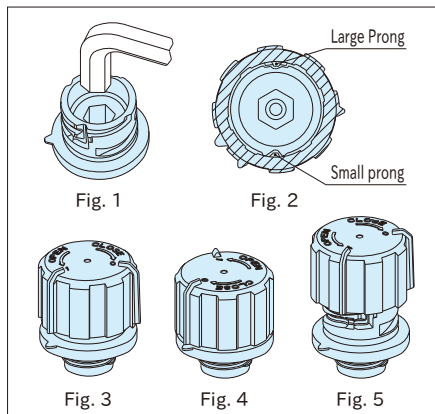

- 1) Screw the connector onto the tank using a hex. wrench at a screw torque of up to 8Nm, and insert the air filter.
- 2) Align the prongs on the inside of the cap with the prong-receiving grooves on the connector, and mount the cap onto the connector.
- 3) Turn the cap clockwise until you hear a click. This click stands for the OPEN position.
- 4) Turn the cap clockwise further by 120°. This is the CLOSE position.
- 5) To remove the cap, turn the cap counterclockwise beyond the OPEN position.

- The OPEN position allows letting in and out air freely, and the CLOSE position allows preventing oil outflow.

- Working temperature : Between 0°C and 80°C

Breathability Curve (reference)

