
# LR-EN

## **COLUMN LEVEL INDICATORS**

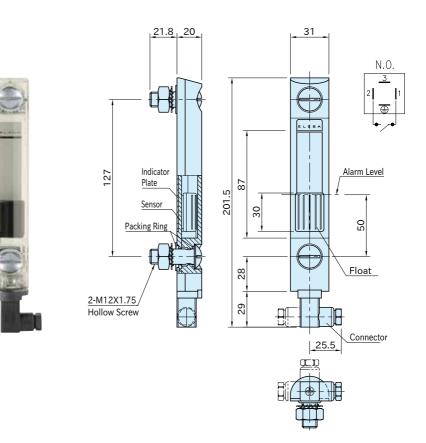

Original ELESA Model HCV-E-AX



Туре	Body	Setscrews	Nut	Float/Sensor Bracket/ Connector	Packing Ring
Special clear polyamide plastic	Aluminum (A3104)	Steel (SUM24L) Zinc plated finish		Black polyamide plastic (glass-fiber reinforced)	Nitrile rubber (NBR)

Part Number	Weight (g)
LR-127EN	155

#### **Features**

- ·Oil penetrates into the indicator through the two setscrews.
- •The plastic material is resistant to impact and general chemical agents, and does not get discolored with light.
- •Removable indicator plate for additional marking or lettering.
- •The curved clear front cover provides a lens effect that magnifies the text on the indicator plate and allows reading even from sides.
- ·Ultrasonically welded for perfect sealing to avoid oil leak.
- •The connector can swivel for front-face or sideface (right or left) setting.
- ·The float permits easy reading.
- •The built-in magnetic float activates the electric contact with the sensor bracket when it comes down to the alarm level.
- ·The connector is sealed.
- ·Protection class: IP65


#### How To Use

#### ■How To Connect

- 1.Remove the connector from the body loosening the setscrew on the bottom.
- 2.Take out the contact holder and then loosen the plug.
- 3.Insert the cable through the plug into the connector to connect it to the terminals #1 and #2 of the contact holder.
- 4.Press the contact holder into the connector for assembly at a desired position. Next, set the packing ring to place the assembly back on the body, and then tighten the setscrew.
- 5. Tightening the plug completes cabling.

#### Note

- •Do not mount indicators on the water tank to avoid them from expanding due to water absorption.
- ·Not designed for resistance to pressure.
- ·Avoid contact with alcohol chemical agents or cleaning liquid.
- Replace the packing ring with a proper one when using the indicator in oil including phosphoric oxides.
- •Ensure that the indicator plate is not in direct contact with oil to avoid possible torsion or deformation.
- ·Avoid the indicator from being placed near the magnet.
- ·Use vertically with the connector positioned below.

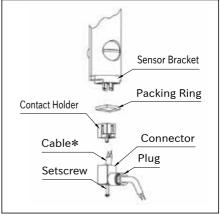

\*) Not furnished

### Technical Information

·Working temperature : Between -30°C and 90°C

·Max. voltage: DC200V
·Max. current: 1.2A

·Contact Capacity: 10VA

·Connector: IP65 protection class

:PG7 thread size

(for cables of 6 or 7mm O.D.)

·Conductor cross section of cable: Max.1.5mm<sup>2</sup>

#### ■Installation Instructions

Max. Screw Torque: 12N·m

