


How To Use PNEUMATIC FLEX LOCATORS


■ How to Use

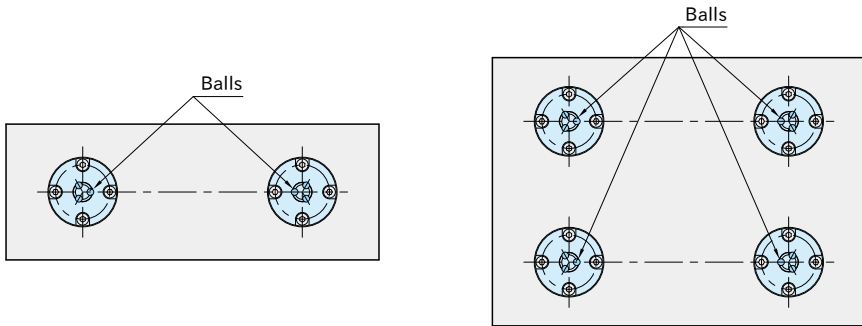

The pins should be mounted in the direction shown in the above figures.


■ How to Remove (Direct Style Pins)

For easier removal, insert screws into the tapped holes and screw them.

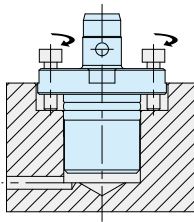

■ How to Remove (Bushings)

For easier removal, insert screws into the tapped holes and screw them.

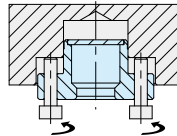

🔧 Note

Size	Max. Loading Weight (kg)
AMWF18	40
AMWF26	56

- If the total weight exceeds the maximum loading weight, the locating repeatability may exceed $\pm 10 \mu\text{m}$.
- In vertical use, the locating repeatability may exceed $\pm 10 \mu\text{m}$.
- Pins and Bushings should be positioned equally against the center of the fixture plate.
- For Port Style Pins, use with air joint that is available commercially.

Note: The maximum loading weight is the entire sum of the weight of fixture plates, fixtures and workpieces.

Note: The maximum loading weight shown is the value when two sets each of **AMWF-L-S** Pins and **AMWF-BU** Bushings are used.