


How To Install FLEX LOCATORS (Through)


Feature

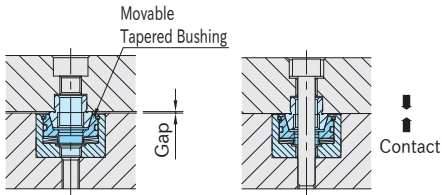

- When the fixture plate is lifted down, the tapered pin engages with the tapered receiver bushing.
- The movable tapered receiver bushing goes down by screwing the clamping screw and the fixture plate contacts with the base plate.

How To Install

Bushings on Base Plate

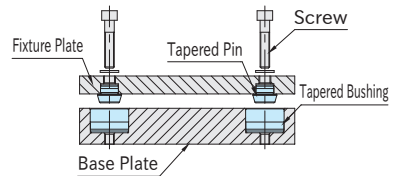

Pins on Base Plate

