


# How To Install FLEX LOCATORS (Through)


## Feature

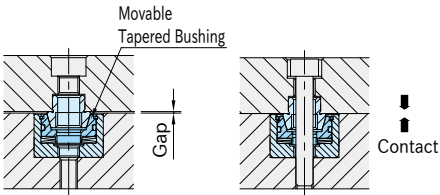

When the plate is positioned on the base plate, the tapered surfaces make contact. Securing the plates with screws compresses the spring-loaded floating bushing in the Locating Receiver, providing secure contact between the plate surfaces.

## How To Install

### Locating Receivers on Base Plate

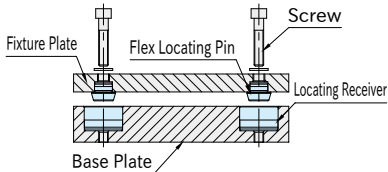

### Pins on Base Plate

