


# How To Install FLEX LOCATORS (Blind)


## Feature

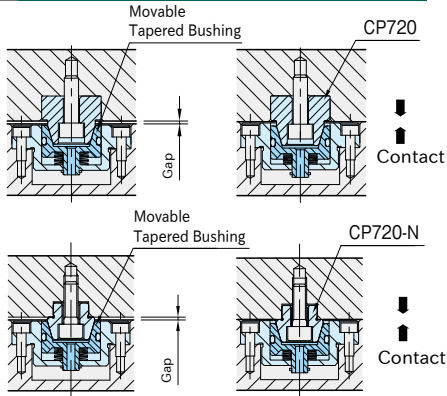

- Fixture plate is lifted down, and tapered pin engages with tapered bushing.
- Movable tapered bushing goes down, and fixture plate contacts with base plate.

## How To Install

### Bushings on Base Plate

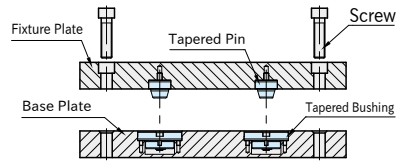

### Pins on Base Plate

