

TR2

TRAY HANDLES





TR2-A
(Rubber-Retaining Style)




TR2-B
(Screw-Retaining Style)

Tray	End Cap
Aluminum (A6N01S) Anodized finish Satin finish Natural	Polyamide plastic Black

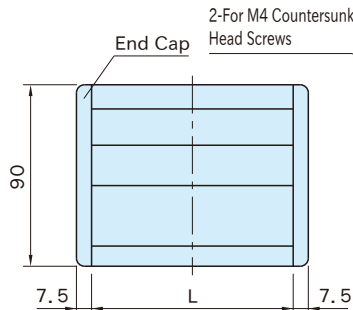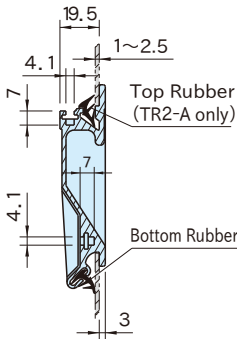

TR2-A
(Rubber-Retaining Style)

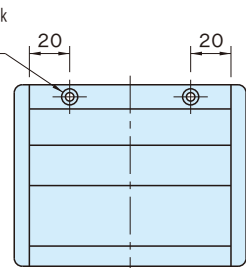

TR2-B
(Screw-Retaining Style)


Rubber-Retaining Style		Screw-Retaining Style		L	U (*)	Panel height E (**)	Mounting	Load Capacity (N)
Part Number	Weight(g)	Part Number	Weight(g)					
TR2-100A	107	TR2-100B	100	100	3	132.5	E	500
TR2-118A	126	TR2-118B	120	118				

*) 1U=44.45mm

**) Panel height≠U×44.45mm-0.8mm

How To Use

Mounting Cutout

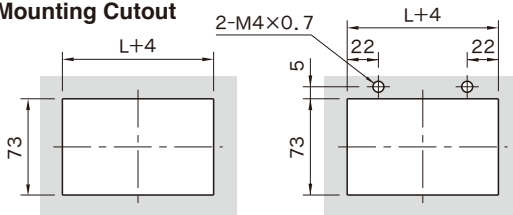

TR2-A

TR2-B

How To Install

1. Put a rubber insert into the bottom groove of the tray.
2. Mount an end cap on both sides.
3. Set the lower ledge of the tray on the bottom of mounting cutout.
4. TR2-A: Put another rubber insert into the top groove of the tray.
TR2-B: Screw the top of the tray.

Supplied With

TR2-B : 2 of countersunk screws(stainless steel), M4×8