
# FORM HOLDING CLAMPS

R⊕\S IMAO



Note: Jaw is not included.

Body	Pull Cylinder	Cam Cylinder
S45C steel Electroless nickel plated	SCM415 steel Carburized-hardened Black oxide finish	SCM435 steel Quenched & tempered Black oxide finish

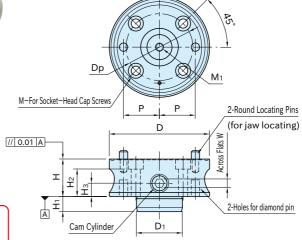

# **★**Key Point

Can hold on external/internal form.

Part Number	D	H (±0.01)	D <sub>1</sub> (g6)	H <sub>1</sub>	М	H <sub>2</sub>	Dp	P (±0.02)	W	Нз	<b>M</b> 1
CP125-06501	65	35	28	12	M 6	27	42	22	8	12	M 8×1.25
CP125-09001	90	40	42	14	M 8	30	60	30		14	M10×1.5
CP125-12001	120	45	55	18	M10	33	80	43	10	16	C.I XUIIVI
CP125-16001	160	50	63	24	M12	36	110	60	10	18	M12×1.75

	Allowable		Proper Jaws							
Part Number   Screw   W		Weight	For External Form Holding			For Internal Form Holding				
		(kg)	Part Number	Clamping Force(kN)	Allowable Compression Dia.	Part Number	Clamping Force(kN)	Allowable Expansion Dia.		
CP125-06501	15	0.8	CP126-06501	4.5		CP127-06501	4.5			
CP125-09001	25	1.7	CP126-09001	7	φ0.6	CP127-09001	7	φ0.6		
CP125-12001	40	3.5	CP126-12001	CP126-12001 10	Ψ 0.0	CP127-12001	10	Ψ0.0		
CP125-16001	40	7.1	CP126-16001	12		CP127-16001	10			

# **Technical Information**

•Part locating repeatability:  $\pm 0.03$  •Jaw locating repeatability:  $\pm 0.02$ 

### Note

Do not tighten the cam cylinder without the workpiece set to prevent damage and deformation. Tightening with the torque beyond the allowable screw torque will lower the durability of the jaw.

## **Supplied With**

•CP125-06501 : 1 pc. of Diamond Locating Pin (BJ722-06001) •CP125-09001 :1 pc. of Diamond Locating Pin (BJ722-08001) •CP125-12001 :1 pc. of Diamond Locating Pin (BJ722-10001)

•CP125-16001 :1 pc. of Diamond Locating Pin (BJ722-12001)

·CP126 Jaws for External Form Holding ·CP127 Jaws for Internal Form Holding

BJ722 Diamond Locating Pin

**Related Product** 

·CP122 Mounting-on-lathe Adapters

### **Feature**

Two optional jaws allow clamping a workpiece both on its external form and internal form.

> JAW FOR EXTERNAL FORM HOLDING CP126

TAPERED SCREW FOR INTERNAL FORM HOLDING CP127-B JAW FOR INTERNAL FORM HOLDING CP127


Note: CP125 does not include the jaw.




FORM HOLDING CLAMP CP125

### **How To Use**


# ■Mounting Hole Dimension

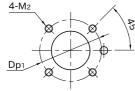

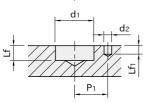

Part Number	d <sub>1</sub> (H7)	Lf	d <sub>2</sub> (G7)	Lf <sub>1</sub>	P <sub>1</sub> (±0.02)	M <sub>2</sub>	Dp <sub>1</sub>
CP125-06501	28	13	6	6	22	M 6×1	42
CP125-09001	42	15	8	8	30	M 8×1.25	60
CP125-12001	55	19	10	11	43	M10×1.5	80
CP125-16001	63	25	12	13	60	M12×1.75	110

## ■Installation Instruction

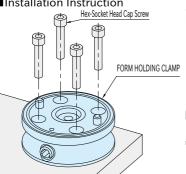

Insert an included diamond pin into the body for locating and secure the body to the fixture plate with 4 socket-head cap screws.

Note: Use either of the holes for diamond locating pin for your application.

Dimension of Diamond Locating Pin

	1	
111		
		<del>- 11/1</del>
		φ. D:
		' \ Diamond
		Locating Pin
		(included)

Part Number	Diameter		
CP125-06501	φ 6h6		
CP125-09001	φ 8h6		
CP125-12001	φ10h6		
CP125-16001	φ12h6		