


CP157

TAPERED PINS

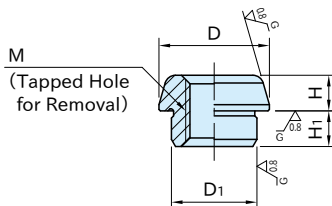


Body
S45C steel
Black oxide finished
Precision ground

Part Number	D ₁ (g6)	D	H	H ₁	M	Weight (g)	Precision Locating Receivers
CP157-08001L	12	15.5	5	5	M 8×1.25	8	CP780-20038L, CP780-20038D
CP157-12001L	18	24.5	8	6	M12×1.75	27	CP780-28052L, CP780-28052D
CP157-16001L	22	31.5	10	7.5	M16×2	51	CP780-36065L, CP780-36065D
CP157-20001L	30	44.2	13	7.5	M20×2.5	134	CP780-50085L, CP780-50085D

How To Use




■ Mounting Hole Dimension

Mounting on Fixture Plate

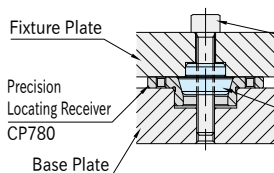

Mounting on Base Plate


Screw for Clamping
(Use washers if necessary.)
(See M₂ in the table below
for proper screw sizes.)

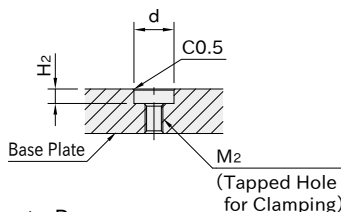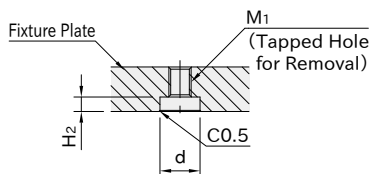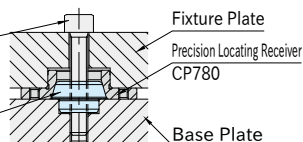

Part Number	d ($\begin{smallmatrix} 0 \\ -0.02 \end{smallmatrix}$)	H ₂	M ₁	M ₂
CP157-08001L	12	5.5	M 8×1.25	M 6×1
CP157-12001L	18	6.5	M10×1.5	M 8×1.25
CP157-16001L	22	8	M14×1.5	M10×1.5
CP157-20001L	30	8	M18×1.5	M12×1.75
				M16×2

■ How to Remove

For removal, insert a screw into the tapped hole and screw it.

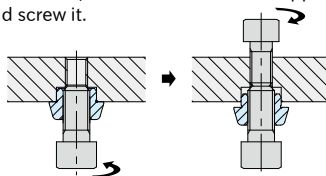

Reference

How To Use PRECISION FLEX LOCATORS