


How To Install PNEUMATIC CLAMPING MODULES

How To Use


■ Mounting Hole Dimension

• Pneumatic Clamping Modules

Flange Mounting

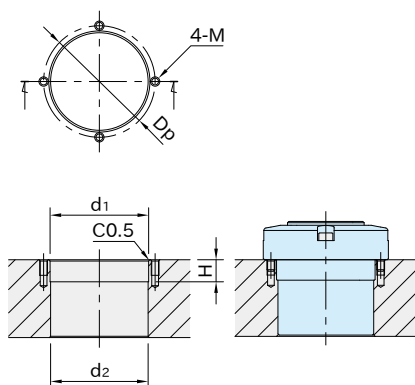


Flush Mounting

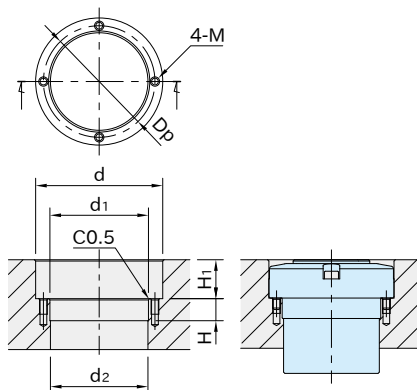


Part Number	d ₁ (H7)	H	d ₂	d	H ₁ (±0.05)	M	D _p
AMWFH49-S	38	8.5	37.8	50	15.1	M3×0.5 Depth 6	43
AMWFH64-S	48	10.5	47.8	65	20.1	M4×0.7 Depth 8	56

• Clamping Pins

AMWFH-M-L (Accurate)

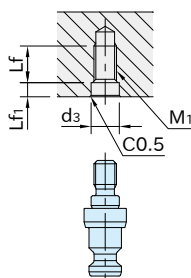


AMWFH-M-S (Standard)

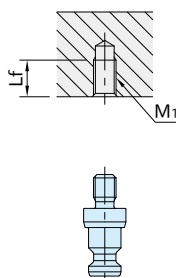


■ Machining Accuracy

AMWFH-M-L Accurate Clamping Pins

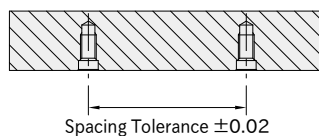

AMWFH-S Pneumatic Clamping Modules

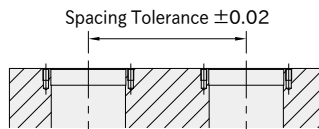

Part Number	M ₁	L _f	d ₃ (H7)	L _{f1}
AMWFH49-M6L	M6×1	10	8	4
AMWFH64-M8L	M8×1.25	13	10	5
AMWFH49-M6S	M6×1	10	—	—
AMWFH64-M8S	M8×1.25	13	—	—