



Instruction Manual For Adjustable-torque Handles

■ How To Set Torque

*) The preset torque is roughly its maximum tightening torque.

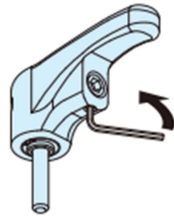


1. Loosen the locking screw by inserting a hex wrench into the underside of the body.

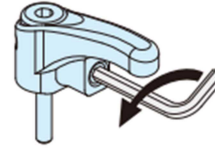


2. Adjust the torque by turning the torque-adjusting screw in the side of the body.

*) Adjust the torque-adjusting screw within the torque range.

Do not overtighten or overloosen the screw.

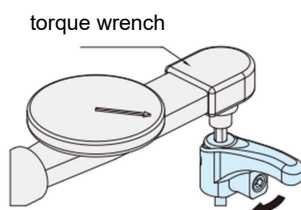

3. Measure the torque with a torque wrench.
 - Connect a torque wrench to the Adjustable-Torque Handle.
 - Apply a load in the tightening direction, and fine adjust the depth of torque-adjusting screw to reach the desired torque when the handle clicks.

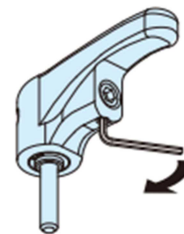


Type	Torque Range (N·m)	Tightening Force (kN)
ATCL 6	1~3.5	0.8~2.9
ATCL 8	2~5.4	1.3~3.4
ATCL10	3~8	1.5~4


4. When the desired torque is reached, tighten the locking screw.

■ Notes

- For initial several thousand operations, the tightening torque decreases. (See the graph below.)
- Measure the torque regularly, and fine adjust the depth of torque-adjusting screw when needed.
- The tightening torque can vary. (Max.±15%)
Not recommended for applications where precise tightening torque is required.

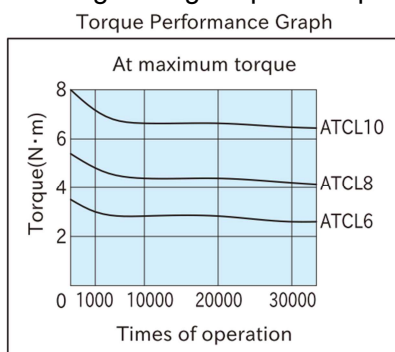

■ Components

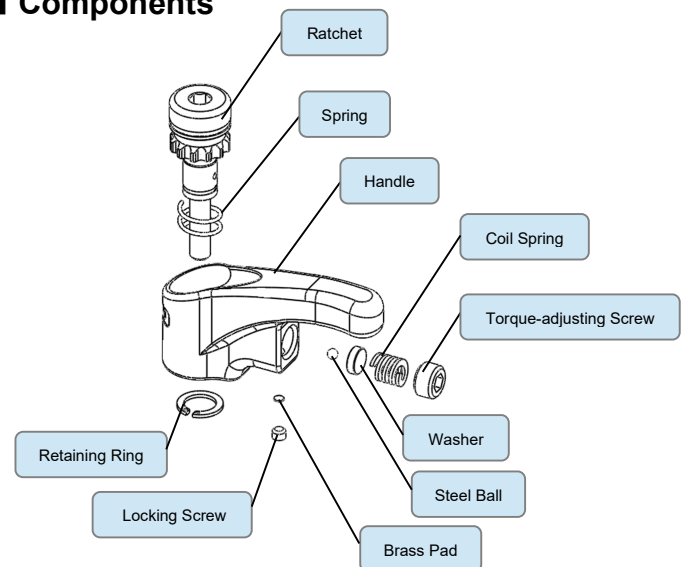

IMAO CORPORATION
 【CONTACT US】

Export Sales Team

<https://www.imao.com/en/contact-us/>