
CAM EDGE CLAMPS

R⊕\S IMAO



Туре	Body	Jaw/Handle Shaft	Handle
QLSCH-L	S45C steel	S45C steel Quenched & tempered	SCM440 steel Quenched & tempered Electroless nickel plated
QLSCH	Black oxide finished	Black oxide finished Precision ground	SCM440 steel Quenched & tempered Black oxide finished

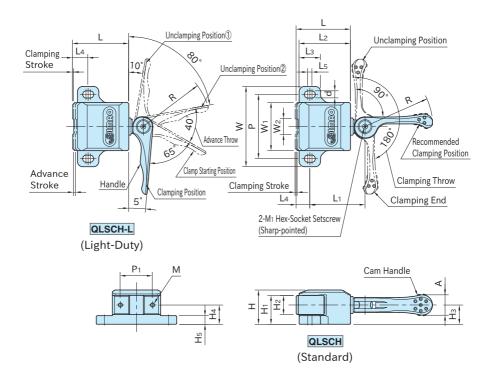

Size	W ₁	W ₂	H ₁	H ₂	М	P ₁	H4	L ₄	W	L ₃	H ₅	d	L ₅	Р
QLSCH32	45	15	27	18	M4×0.7 Depth 6	30	18	13	75	20	8	6.6	3	60
QLSCH40	60	20	33	22	M5×0.8 Depth 8	40	22	17	100	26	10	8.6	4	80

Size	Н	L	L ₂	R	L ₁	Нз	M 1	
QLSCH32	32	51	48	63	51.5	18	M4×0.7-5L	
QLSCH40	40	67	63	80	67	22	M5×0.8-6L	

Related Product



Stronger type without handle is available. **QLSCH-H** SIDE CLAMPS

> 100 150 200

Operating Load (N)

QLSCH40

OLSCH32

Performance Curve Standard

■Light-Duty

Part Number				Operating Load (N) **)	Clamping Force (kN)	Weight (g)
QLSCH32L	14	0.3	0.8	40	0.6	600
QLSCH40L	18	0.4	0.0	50	1.2	1320

- *) Dimensional variations between workpieces should be 0.1mm or less.
- **) Load needed to turn the handle to clamping position

■Standard

Feature

on operating loads.

·In clamping, the jaw

provides downward

force to prevent part lift

on its finished surface. Jaw

Part Number	А		ng Handle Operating te Number Load (N) *							
QLSCH32	19	1.6	QLCA-06	150	2	620				
QLSCH40	24	2.2	QLCA-08	200	3	1360				

***) Allowable load to operate the handle

•The cam handle allows fast clamping in single operation.

*Spring-loaded light-duty style allows distributing constant clamping force.

·Standard style allows adjusting clamping force depending

· Precision-ground jaw is perfect for clamping the workpiece

Changing Handle Position


Clamping Force (kN)

3.0

2.0

1.0


The handle shaft has 4 countersinks which are provided every 90° for 4 options of handle position.

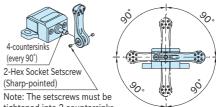

tightened into 2 countersinks.

How To Use

■Standard

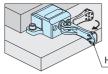

Turning the cam handle allows the jaw to advance to the workpiece for clamping. For clamping forces, see the performance curve.


Handle

■Light-Duty




Installation Instructions for Light-Duty Style


The steps below must be followed so that constant clamping force can be distributed within the clamping stroke.

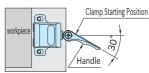

Set the handle to the clamp starting position.

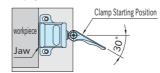

Contact the jaw to the workpiece.

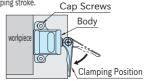

Fasten the clamp with hex socket-head cap screws, and then turn the handle to the clamping position for clamping.